# RPE Parallel Gripper-Electric Gripper Series

# • Failsafe Operation:

Spring closed feature allows for full grip force during power off conditions.

# • Electrically Actuated:

Requires simple 24VDC pulsed signal. No programmable or expensive controller required.


Adjustable inductive proximity sensors available.

### Low System Impact:

Easily integrated into current engineering and manufacturing processes.

### Miniature size:

Compact design allows for gripping small parts in small spaces.

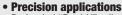

Precision applications:
Preloaded "Dual-V" roller bearings eliminate side play for excellent part position repeatability.

### **Delicate part handling:**

Low friction mechanism allows for repeatable gripping forces for holding delicate parts. Grip force is constant throughout stroke.

### Clean room suitable:

A corrosion resistant shield protects the drive and bearing mechanism. All internal components are lubricated with Krytox™ grease.


### Harsh environments:

All moving components are located within the corrosion resistant cover.

Patent Pending. The RPE is CE marked.

# **Mounting Information:**

# Gripper can be mounted and operated in any orientation

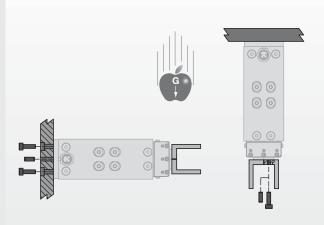

Body mounts with screws and locates with slip fit dowel pins for accuracy

Fingers attach to jaws with screws and locate with dowel pins

# **Technical Specifications:**

# **Product Specifications**

**24 VDC** Voltage Power Max. 40 W Operating Temperature 5° / 50° C (40° / 120°F) Protection Class IP54 100 Clean Room Clean Room with Scavenge Port\* \*Contact Tech Support.

### **Maintenance Specifications**

Field Repairable Yes

### **Application Restrictions**

- Timing, power and load beyond specifications
- · Suitable for external gripping only

# **Product Features**


# **Quality Components** Body made from aluminum alloy with Teflon™ impregnated hardcoat anodize. Jaws, housing, and end cap nickel plated for use in medical parts handling applications.

For wear resistance

and longer life

### **Energy Efficient**

Power is only required for 50 msec to open and close the gripper, no power is required to keep the part gripped or

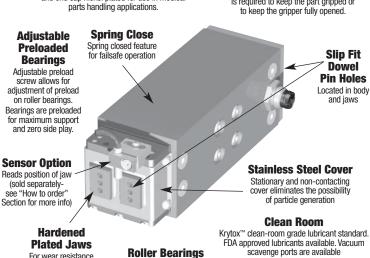

**Style-RPE** 

Style-RPE

Size -100M

# **Size -101M**



Style: Grip Force: Weight:

Stroke: Grip Force: Weight:

> **RPE-101M** 4 mm (0.16 in) 5 N (1.1 lbs) 226 g (0.50 lbs)

4 mm (0.16 in) 5 N (1.1 lbs) 226 g (0.50 lbs)


See **1.16** 

See **1.16** 

# **Operating Principle**

Patented Dual-"V" roller bearings

provide low friction rolling motion and maximum rigidity for fingers

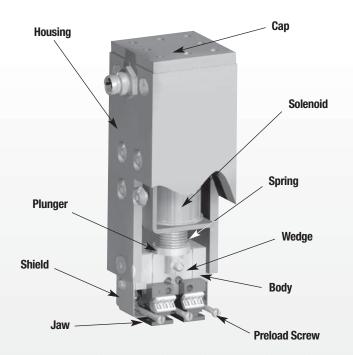


- A short power pulse releases the latching solenoid's plunger, allowing the spring to drive the wedge mechanism.
- . The spring driven wedge drives the jaws towards one another to grip the part. No power is required to maintain grip force.
- To open the gripper, a short power pulse to the solenoid retracts the plunger to the latched position, which opens the jaws. No power is required to maintain the open position.
- Suitable for external gripping only.

### U.S. Patent # 5,529,359. Other Patents Pending.


# PARALLEL GRIPPER RPE-100M/-101M **E-GRIPPER SERIES**



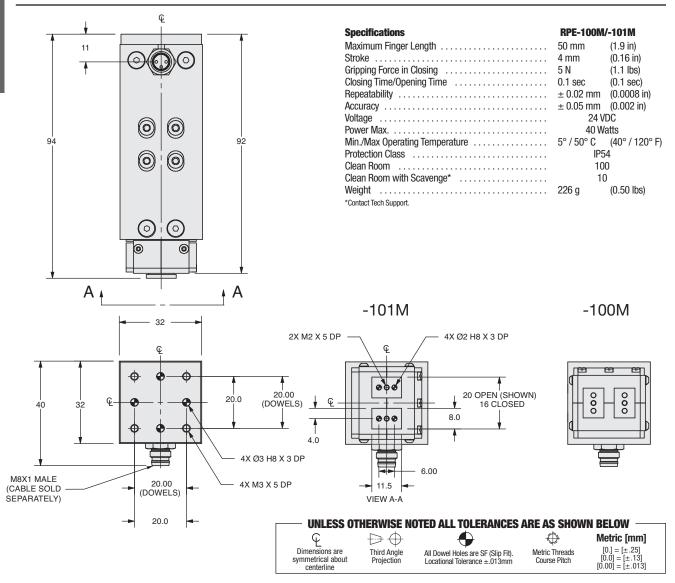

# **Loading Information**

## How to Order: (Order Accessories separately from Basic Model)

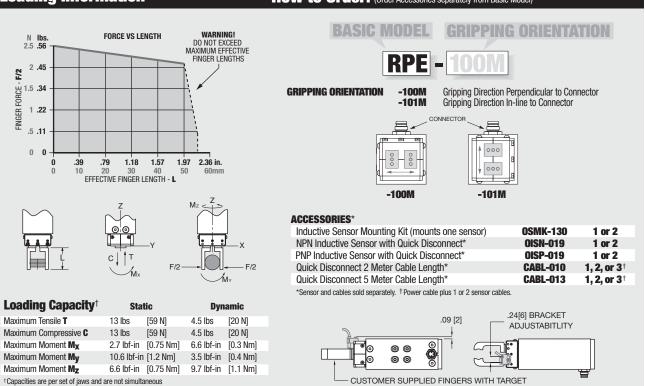




# PARALLEL GRIPPER RPE-100M/-101M **E-GRIPPER SERIES**


### **Installation and Operation:**

- 1. Mount fingers (customer supplied) to gripper jaws using dowel pins and threaded fasteners. See dimensional drawing for hole sizes. Use Loctite® 242 threadlocker or equivalent.
- 2. Mount gripper using dowel pins and threaded fasteners. Gripper can be mounted and operated in any orientation. See dimensional drawing for mounting hole pattern and sizes. Use Loctite® 242 threadlocker or equivalent.
- 3. The following instructions apply to standard operation and require a 24VDC power supply: To open gripper, connect positive lead of power supply to Pin 1 of the connector and negative lead to Pin 3 of the connector. See below for pin orientation. Pulse for 50msec maximum as shown in Timing Diagram. After 50 msec pulse, allow 450msec minimum dwell time. To close gripper, connect positive lead of power supply to Pin 3 of connector and negative lead to Pin 1 of connector. Pulse for 50msec maximum as shown in Timing Diagram. After 50msec pulse, allow 450msec minimum dwell time.

### **WARNING:**

- Operating gripper outside of power voltages and pulse times will cause damage and void warranty
- Do not insert any foreign objects (tools, body parts, etc) between gripper fingers when power is applied.
- Disconnect power from gripper before performing maintenance or making adjustments.
- Do not apply power to gripper for more than 100msec maximum. Observe 10% duty cycle at all times.

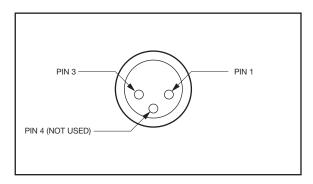


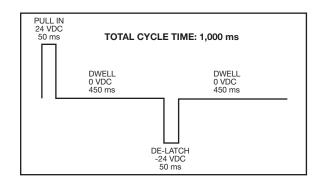

**PIN ORIENTATION** 

TIMING DIAGRAM

NOTE: The RPE is CE marked.

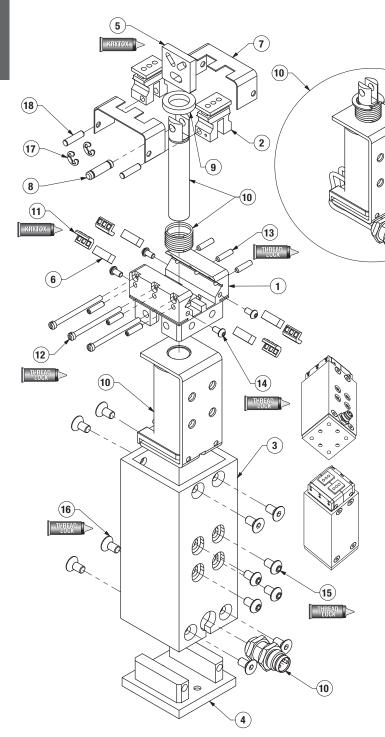

ltem	Qty	Name
01	1	Body
02	2	Jaw
03	1	Housing
04	1	Cap
05	1	Wedge
06	4	Way
07	2	Shield
80	1	Clevis Pin
09	1	Spacer
10	1	Solenoid
11	4	Kit, Roller Bearing
		and Cage
12	3	Preload Screw
13	6	Set Screw-Way Locating
14	4	BHCS-Shield
		Mounting Screw
15	4	BHCS Solenoid
		Mounting Screw
16	8	FHCS-Housing
		Mounting Screw
17	2	Retaining Ring
18	2	Dowel Pin

NOTE: Contact the DE-STA-CO Customer Service for a complete spare parts list with order numbers and prices.

### **Assembly Procedure**


0

- 1) Lubricate #1 body, #5 wedge, and #11 bearings using Krytox™ grease.
- 2) Insert #2 jaws and #5 wedge into body.
  3) Insert #6 way and #11 bearings into each end of the body.
- 4) Adjust preload by adjusting #12 preload screws. (See below for procedure)
- 5) Install #10 solenoid plunger with #8 clevis pin and #17 retaining rings.
- 6) Fasten #10 solenoid to housing. Do not tighten yet, allowing the solenoid to freely move within slots.
- Slide #9 spacer and #10 solenoid spring onto plunger.
- 8) Fasten #1 body into #3 housing. Completely fasten the two screws that are located on the same side as the #10 solenoid 3-pin connector then fasten the two remaining screws on the opposite side.
- 9) Fully open jaws and tighten #15 screws securely.
- 10) Install #7 shields to gripper.
- 11) Fasten #10 3-pin connector.
- 12) Fasten #4 cap into housing. Completely fasten the two screws that are located on the same side as the #10 solenoid 3-pin connector then fasten the two remaining screws on the opposite side.

### **Preload Adjustment Procedure**

- 1) Install preload screws (12) with Loctite® 7649 primer and Loctite® 242 thread locker on threads.
- Tighten until there is no side play in the jaws.
- Cycle gripper (w/finger assembly)
- Recheck for play in jaws & tighten or loosen as needed.




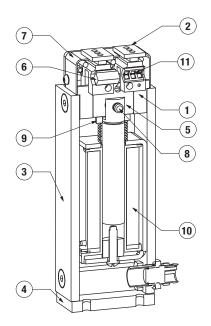

Item	Qty	Name
01	1	Body
02	2	Jaw
03	1	Housing
04	1	Cap
05	1	Wedge
06	4	Way
07	2	Shield
80	1	Clevis Pin
09	1	Spacer
10	1	Solenoid
11	4	Kit, Roller Bearing
		and Cage

NOTE: Contact the DE-STA-CO Customer Service for a complete spare parts list with order numbers and prices.

# **ACCESSORY INSTALLATION & ADJUSTMENT INSTRUCTIONS**

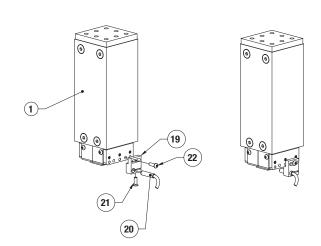


### Installation\*

- 1) Install sensors as shown.
- 2) Adjust for desired end of stroke detection.
- \* Fingers should be designed to act as target for inductive sensor. Sensing range is 0.031 [0.8]. The center line of the sensor diameter is located 0.094 [2.4] off of jaw mounting surface.

Fingers supplied by customer.

# FLANGE MOUNTING PLATE, GANG MOUNTING AND MORE...

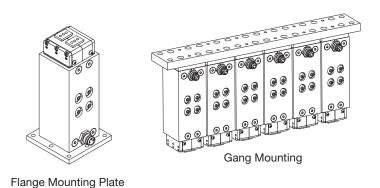

Drawings shown are for concept only. Contact DE-STA-CO Tech Support with project requirements.















Please see back cover for DE-STA-CO Global Locations. www.destaco.com